

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.


CAUTIONS : 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.
 2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.
 3. Keep all hardware parts out of reach of children.

NOTE : THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.
 Tool needed : Screwdriver (not provider).


PART LIST		
ITEM	DESCRIPTION	QTY
A	HEADBOARD	1 PC
B	FOOTBOARD	1 PC
C	FOOTBOARD LEG	2 PCS
D	SIDE RAIL	2 PCS
E	SIDE RAIL SUPPORT WOOD	2 PCS
F	CENTER RAIL	1 PC
G	CENTER SUPPORT LEG	3 PCS
H	CENTER SUPPORT	2 PCS
I	BED SLAT	26 PCS
J	BED LEG (1)	2 PCS
K	BED LEG (2)	2 PCS

HARDWARE LIST		
ITEM	DESCRIPTION	QTY
1	JCBC BOLT M6 x 40mm	20 PCS
2	M6 FLAT WASHER	8 PCS
3	M6 SPRING WASHER	8 PCS
4	WOOD SCREW M3.5 x 16mm	8 PCS
5	WOOD DOWEL M8 x 30mm	8 PCS
6	BED SLAT SIDE FITTER	26 PCS
7	BED SLAT CENTER FITTER	13 PCS
8	M4 ALLEN KEY (BALL SHAPE)	1 PC
9	M5 ALLEN KEY (BALL SHAPE)	1 PC

STEP 1

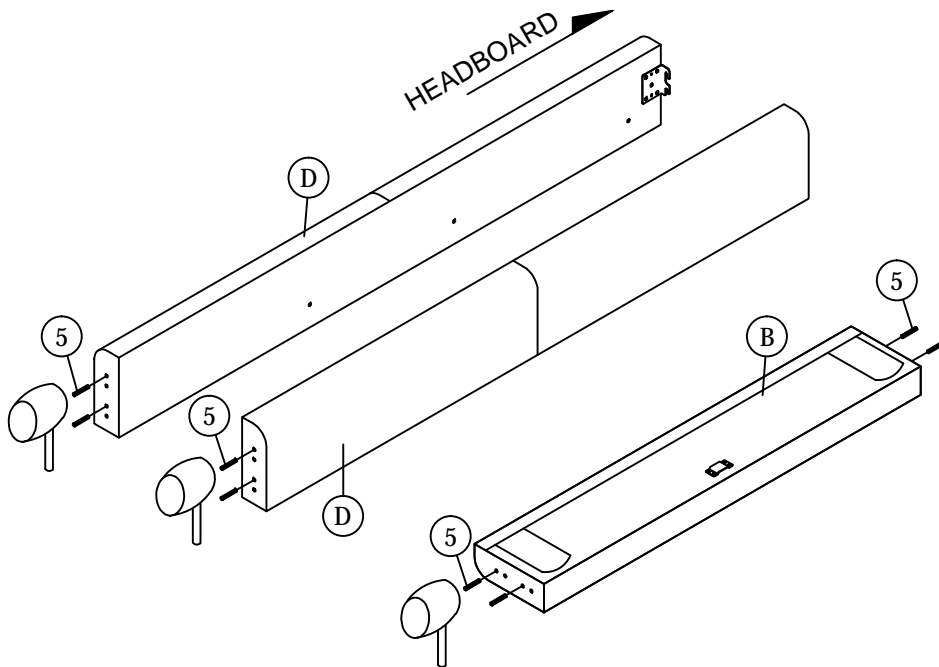


STEP 2



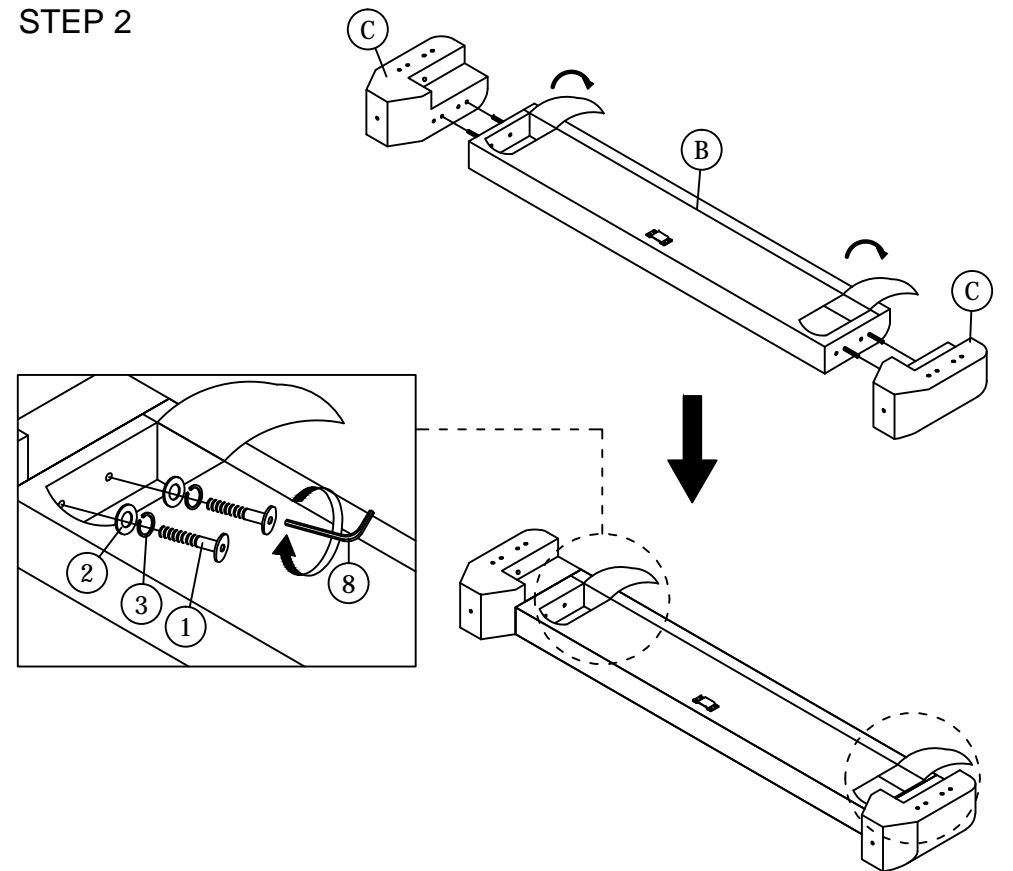


STEP 3


(J) BED LEG (1)

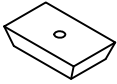


(K) BED LEG (2)

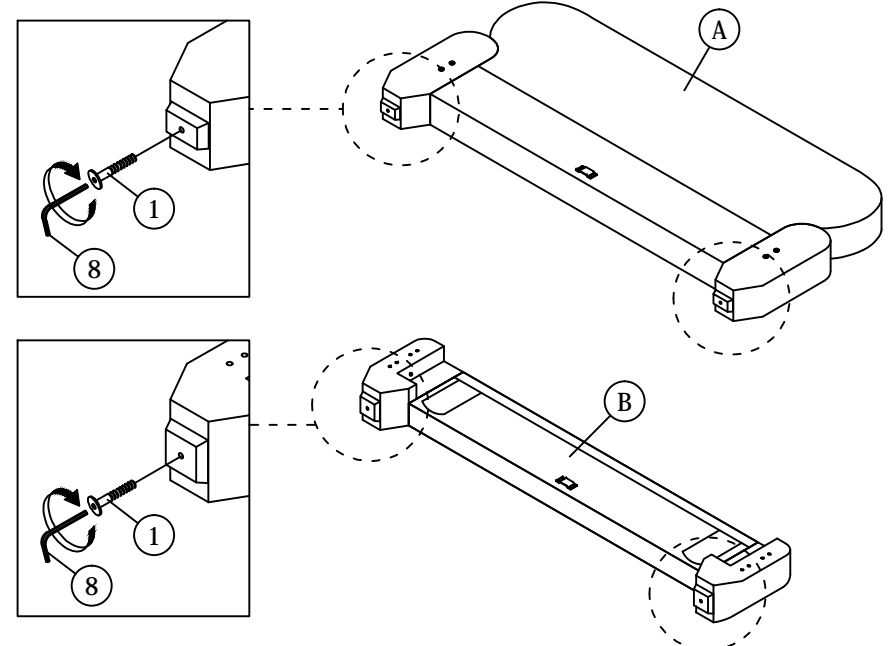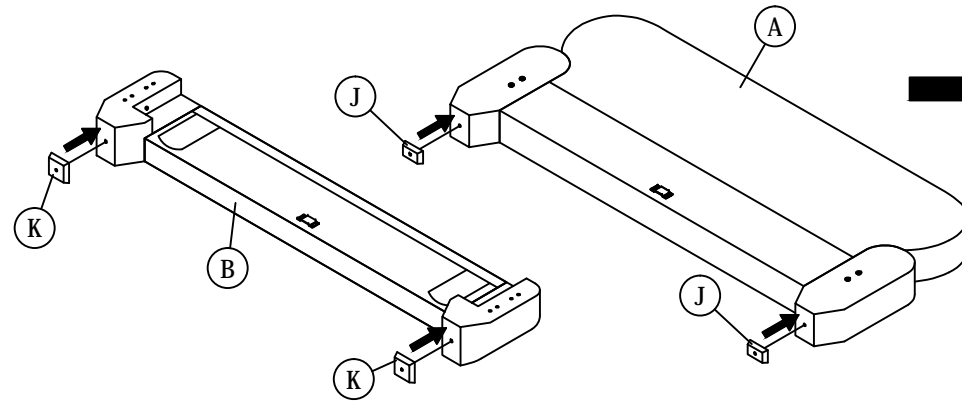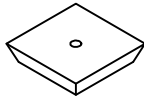


STEP 4

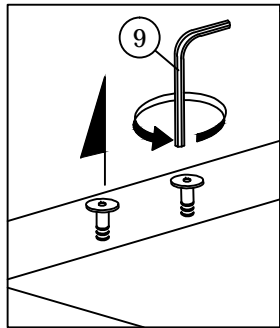

Loosen the pre-inserted bolt on the headboard using Allen key ball shape (9).

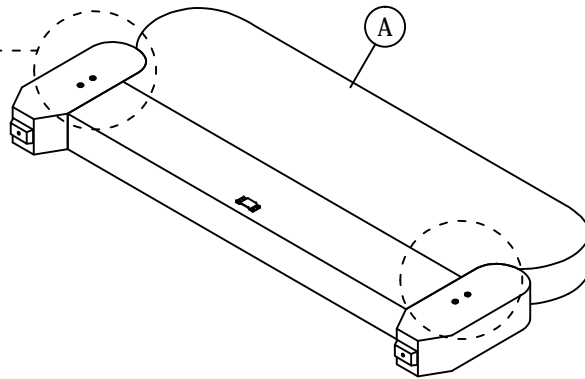


STEP 5

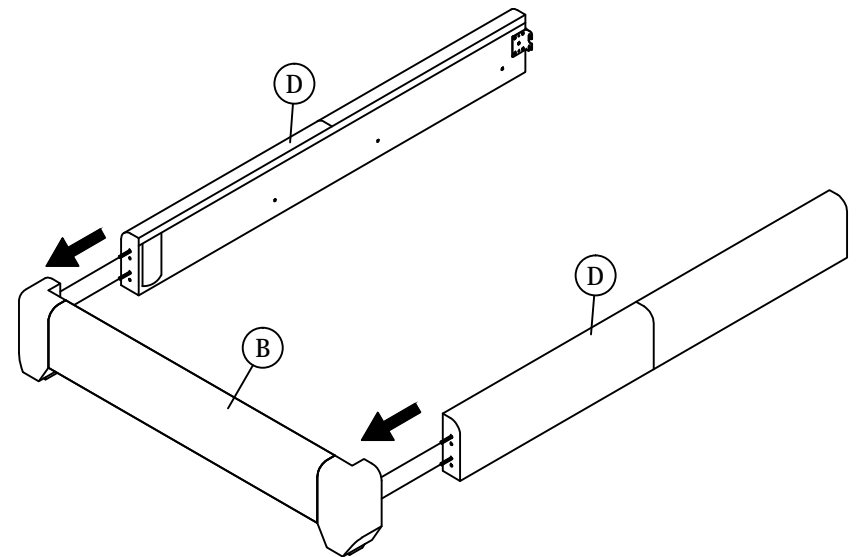


ASSEMBLY INSTRUCTIONS


STEP 6

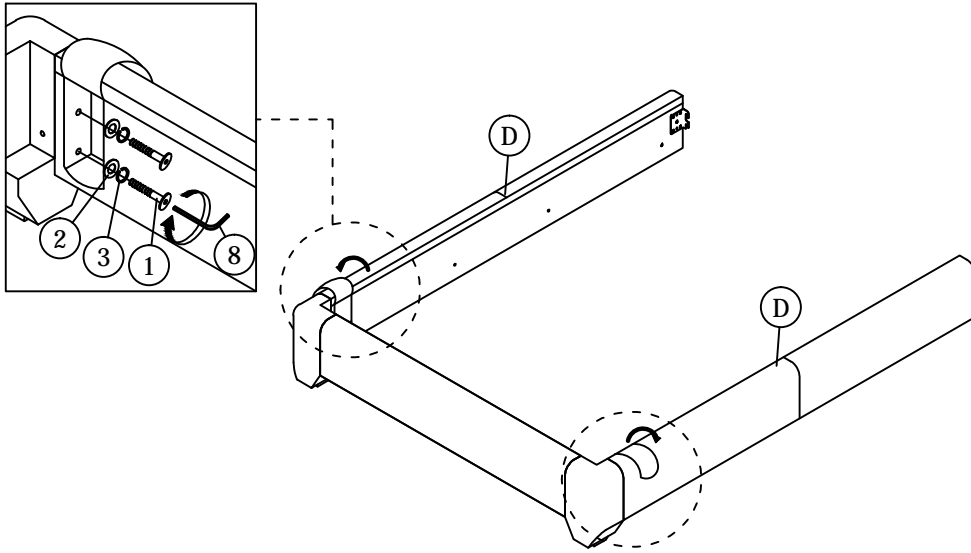

STEP 7

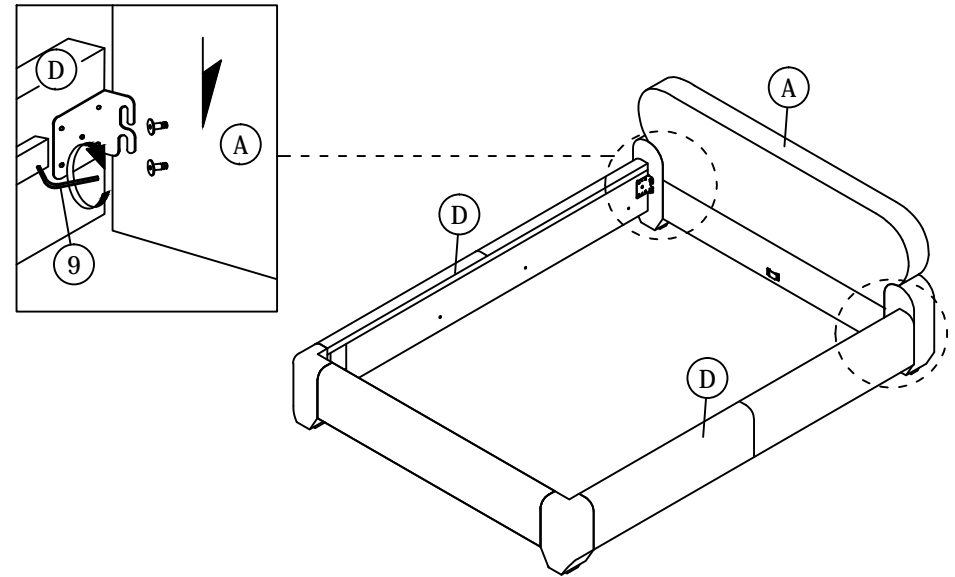


STEP 8

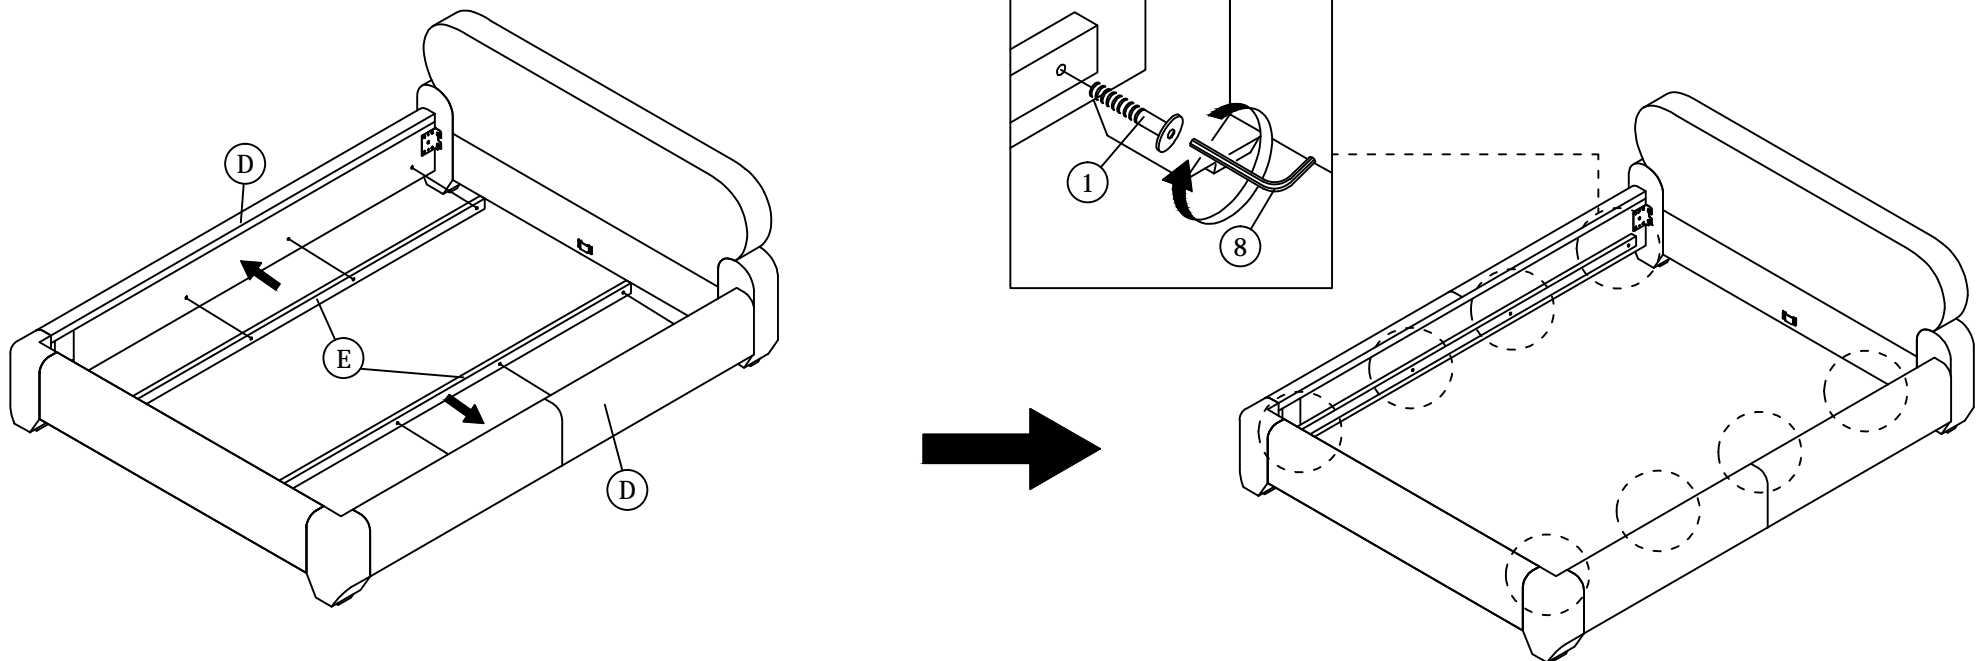



ASSEMBLY INSTRUCTIONS

STEP 9

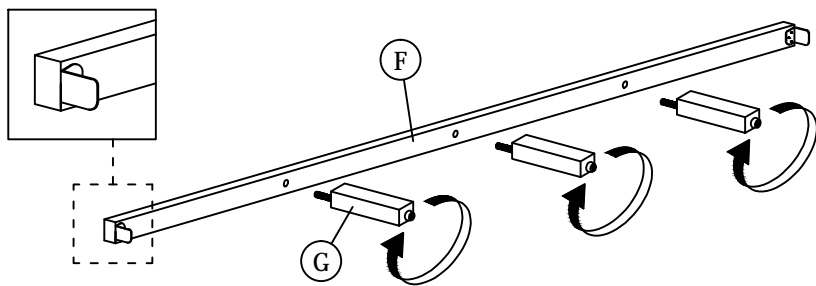


STEP 10

STEP 10.1


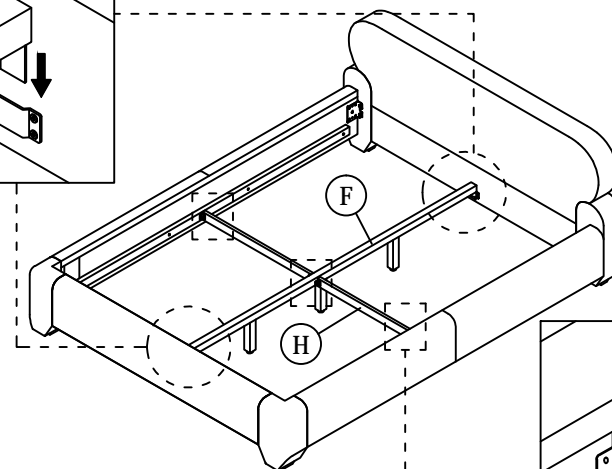
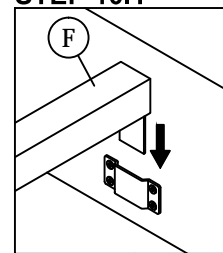


STEP 10.2

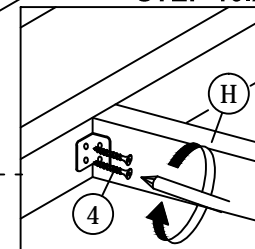


STEP 11


STEP 11.1

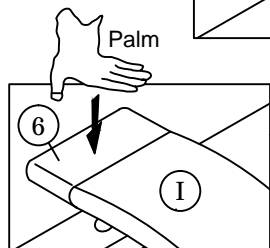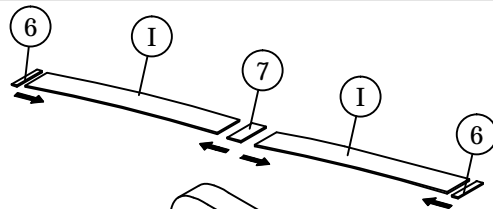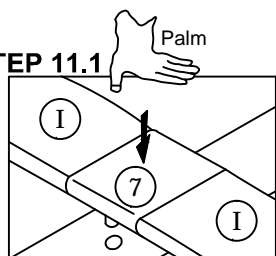

STEP 11.2

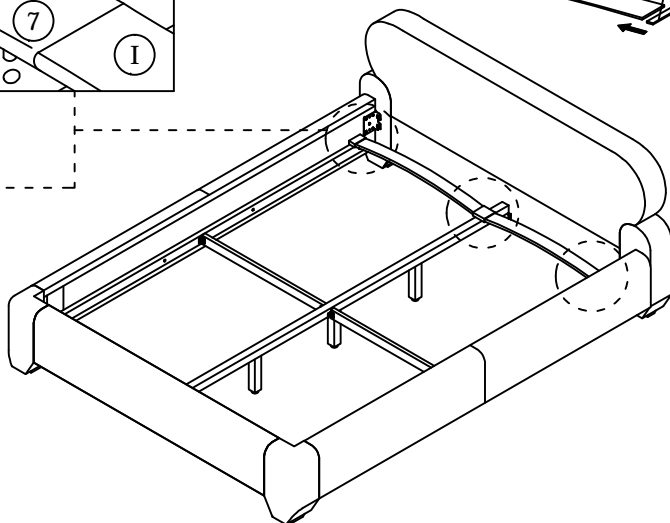

STEP 12

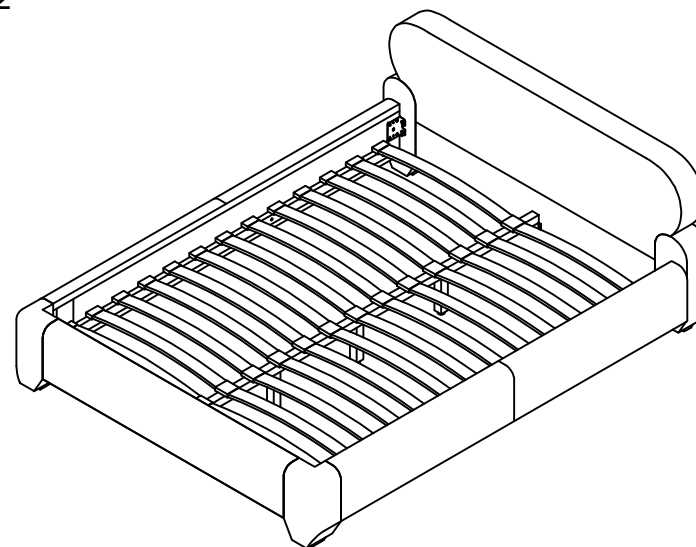

*** When moving the bed position, the center support legs must be adjust to be straight to avoid any broken problem.**