Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTION: 1. Do not FULLY - TIGHTEN the nuts or nuts bolts until they are ready for assembly.

- 2. Do not OVER TIGHTEN the nuts or bolts to avoid causing damages to the thread.
- 3. Keep all hardware parts out of reach of children.


NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.


Tools needed: Screwdriver (not provided).


STEP 1


PART LIST				
DESCRIPTION	QTY			
HEADBOARD	1 PC			
HEADBOARD CUSHION	2 PCS			
HEADBOARD LEG	2 PCS			
SIDE RAIL	2 PCS			
SIDE RAIL LEG	2 PCS			
SUPPORT WOOD (1)	2 PCS			
SUPPORT WOOD (2)	1 PC			
FOOTBOARD	1 PC			
CENTER RAIL	1 PC			
CENTER SUPPORT LEG	3 PCS			
CENTER SUPPORT	2 PCS			
BED SLAT	24 PCS			
	DESCRIPTION HEADBOARD HEADBOARD CUSHION HEADBOARD LEG SIDE RAIL SIDE RAIL LEG SUPPORT WOOD (1) SUPPORT WOOD (2) FOOTBOARD CENTER RAIL CENTER SUPPORT LEG CENTER SUPPORT			


HARDWARE LIST			
ITEM	1 DESCRIPTION		QTY
1	JCBC BOLT M6 x 50mm	(MICHINE)	2 PCS
2	JCBC BOLT M6 x 70mm	∞∞∞∞∞	6 PCS
3	JCBC BOLT M6 x 80mm	@	2 PCS
4	M6 FLAT WASHER	0	4 PCS
5	M6 SPRING WASHER	0	10 PCS
6	WOOD DOWEL M8 x 30mm		4 PCS
7	WOOD SCREW M3.5 x 16mm		20 PCS
8	WOOD SCREW M4 x 20mm	 ()	2 PCS
9	VMB 3162	9	6 PCS
10	BED SLAT SIDE FITTER		24 PCS
11	BED SLAT CENTER FITTER	\Diamond	12 PCS
12	M4 ALLEN KEY (BALL SHAPE)	L	1 PC
13	M5 ALLEN KEY (BALL SHAPE)		1 PC

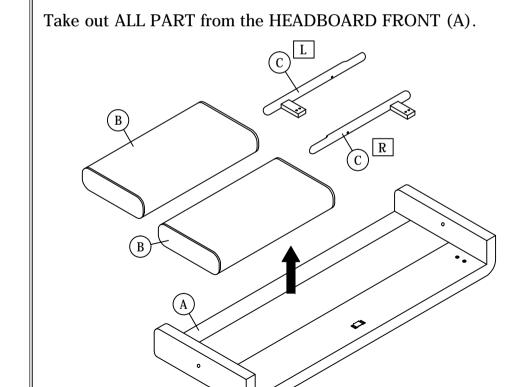


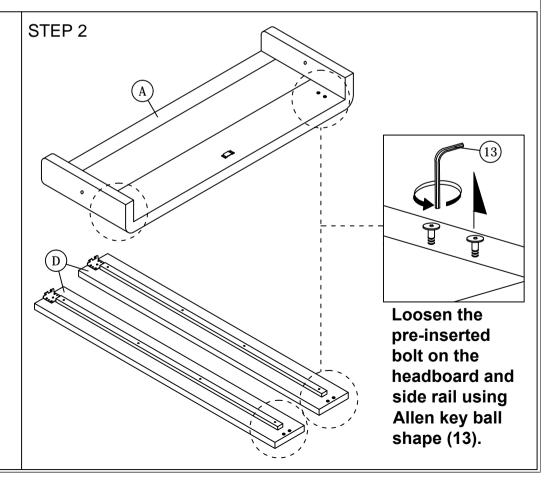

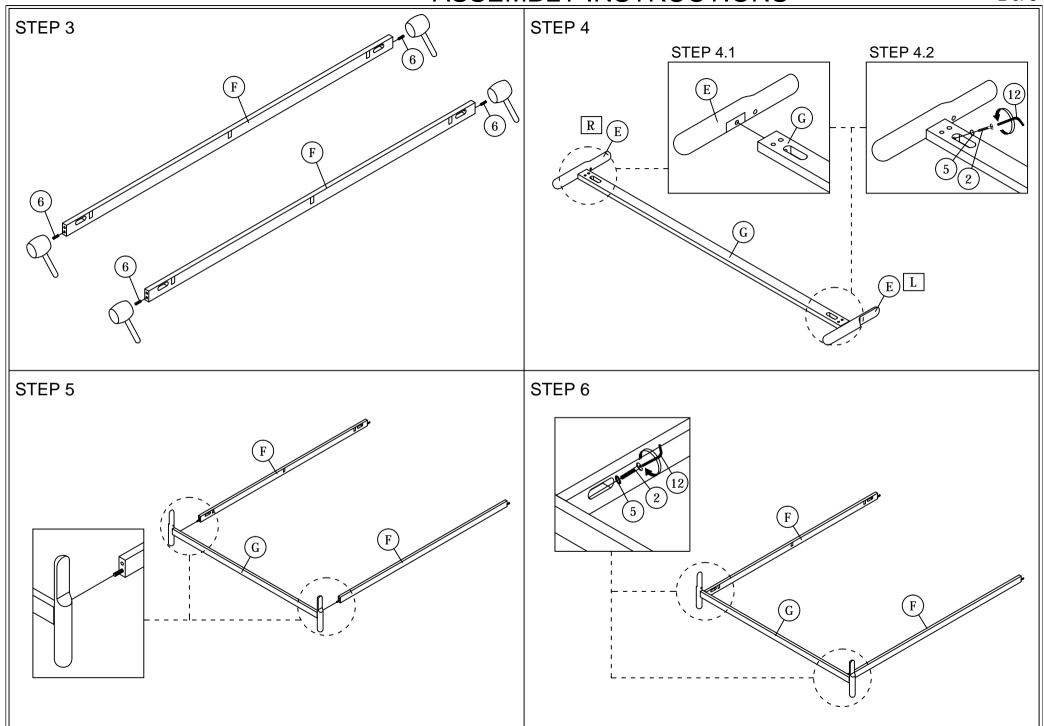


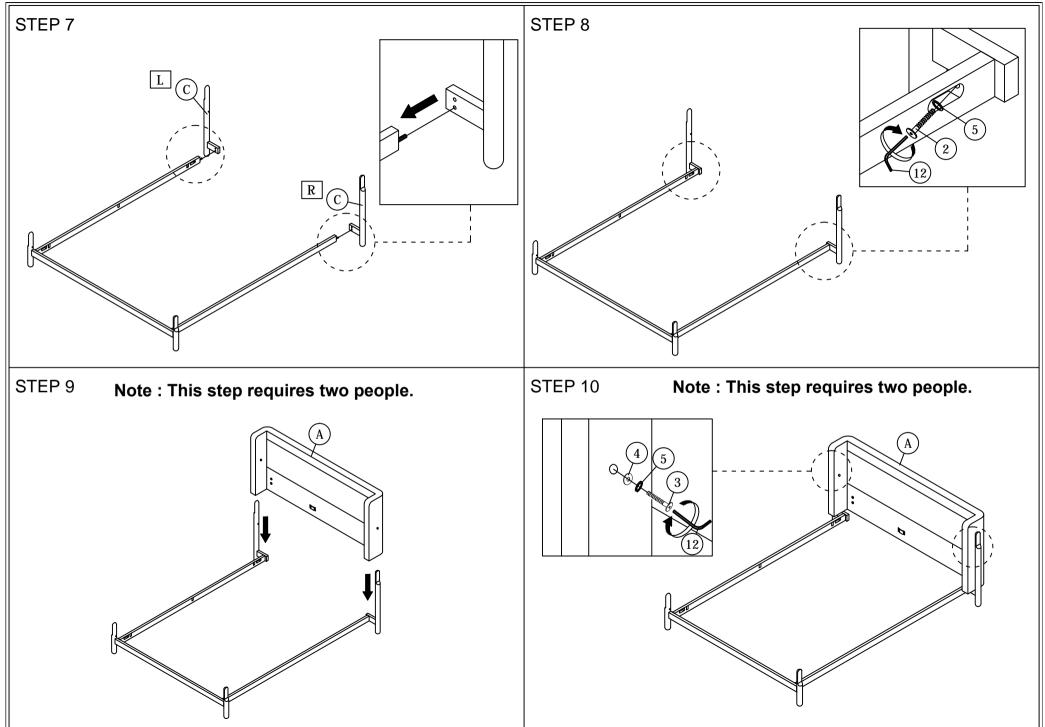

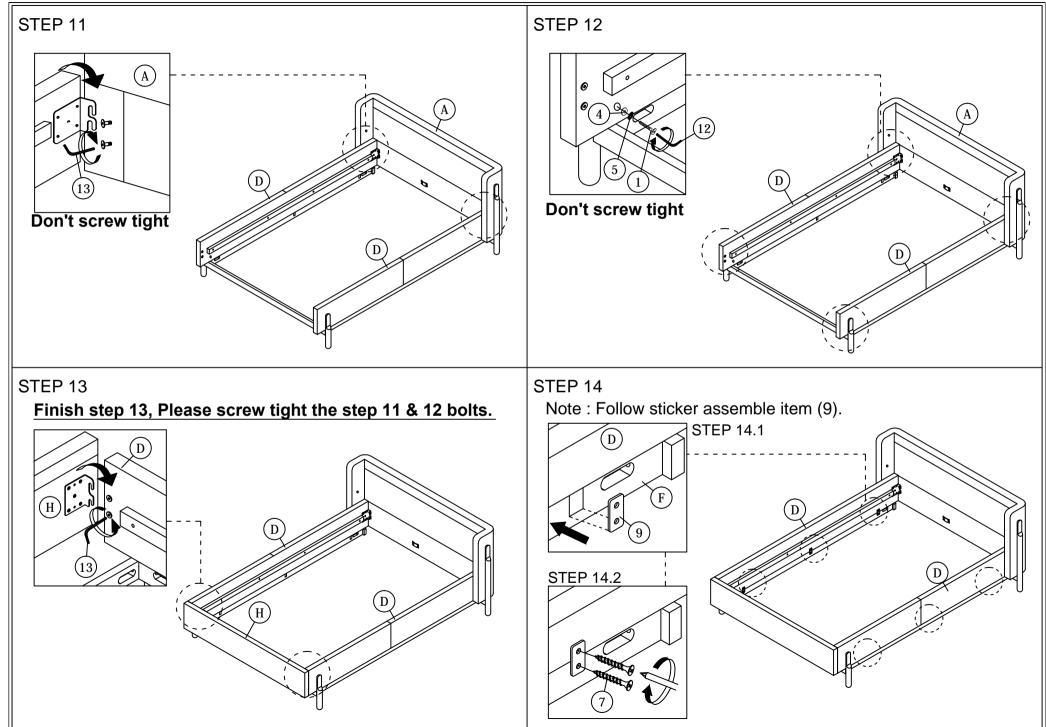

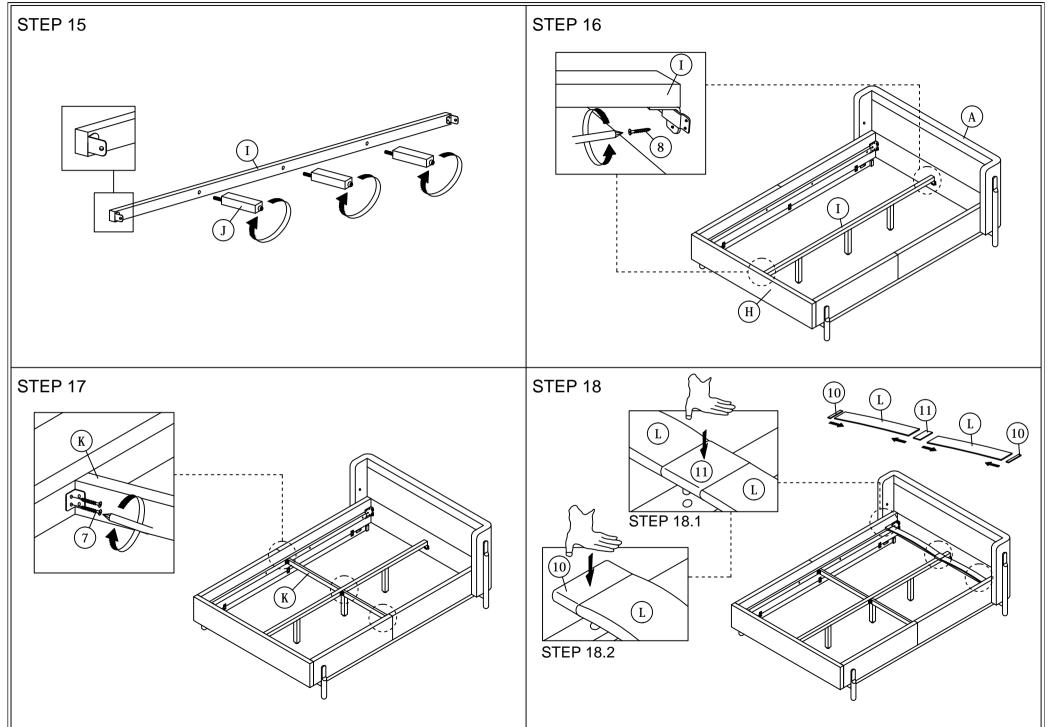


STEP 19

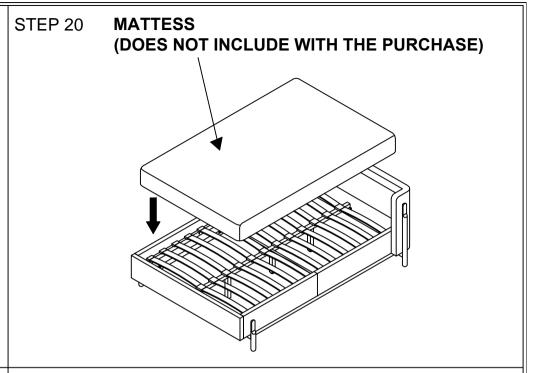


STEP 21

**PUT THE MATTRESS FIRST THEN PUT THE HEADBOARD CUSHIONS.

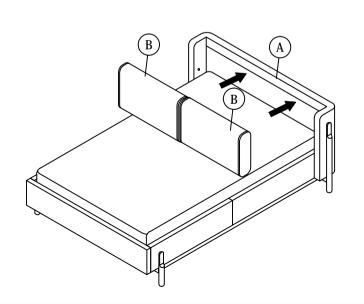

STEP 22

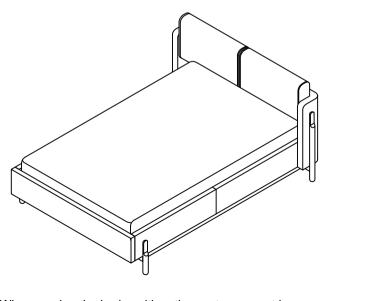

* When moving the bed position, the center support legs must be adjusted or straightened to avoid any broken problems.